OWNER'S GUIDE

TOW BAR KIT (For Chipper Shredders)

Model 290-010-000

Part No.

681-0134

681-0133

710-3001

711-0299

712-0798

736-0133

711-0835

732-0194

Key

No.

1

2

3

4

5

6

7

8

This tow bar kit is an accessory to your chipper shredder. It consists of a tow bar base, a tow bar tongue, and accompanying hardware. Please compare the contents of the carton with the parts list below. If any parts are missing, contact the store from where you purchased, or call 1(800) 800-7310.

PARTS LIST (See Figure 1) Flat Description Qtv. Hex Bolt Tow Bar Base 1 Tow Bar Tongue 1 Hex Bolt 3/8-16 x .88 2 Clevis Pin 1

2

2

1

2

9 736-0169 Lock Washer 2 INSTALLATION

This tow par installation instruction caters to various models of chipper shreaders. Check your chipper shredder unit and follow the instruction that applies.

Hex Nut 3/8-16

Flat Washer

Clevis Pin

Spring Pin




WARNING: For easier installation, if you decide to tip the chipper shredder backward. make sure to drain the oil and the gasoline from the engine before tipping the unit. Also block the unit securely.

Remove the nex nut and lock wasner from the right front engine polt. See figure 2 for location of the polt.

NOTE: For illustration purposes, figure 2 inset shows the polt location with the engine removed from the frame. However, ap not remove the engine from the frame while installing the tow par.

Follow the instruction below to place the tow bar, base in position. See figure 3.





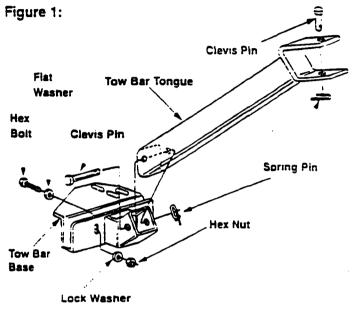


Figure 2:

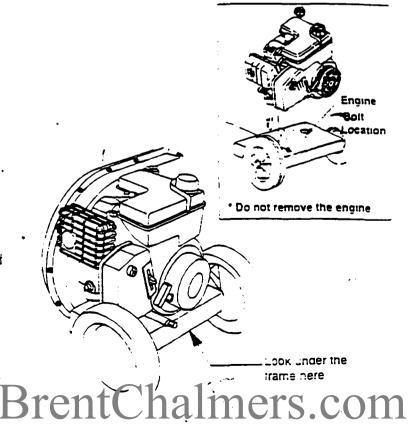

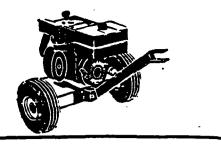


FORM NC 170-0731M

- a. If the wheel axle on your chipper shreader unit goes through the front upper hole on the side of 'the frame, place the tow bar in position so the axle is inside the tow bar base.
- b. If the wheel axle on your chipper shredder goes through the rear lower noie on the side of the frame, place the tow par base in position so the axle is underneath the tow bar base.
- Select the hole in the tow bar base which aligns with the right front engine mounting bolt, and blace base over bolt.
- Place lock washer over bolt with the cupped side of the washer against the tow bar base (crowned * side will go against the hex nut).
- Thread the nex nut onto the bolt very loosely; do not tighten at this time.
- Check the front of the shredder frame.
 - a. If two noies are already provided on the frame, proceed to next step.
 - b. If there are no noise on the frame, press the tow bar base against the frame, tighten the nut on the right front engine bolt, and drill two 13/32" holes using the tow bar as a guide.
- Place flat washers on hex bolts.
- Insert hex bolt (with washer) into the hole from inside the shredder frame, and through the tow bar base.
- If the axie is inside the tow bar base, you may need to place the flat washer against the shredder frame, then insert the boit through the washer, frame and the tow bar base.
- Secure with lock washer and hex nut on the front of the tow bar base. Do not tighten at this point.
- Repeat with other nex bolt. Do not to
- Press the tow bar base firmly agains. a compershredder frame, and lighten both sets of colts and nuts holding the front of the tow bar base. See Figure 5.
- Tighten the engine mounting bolt and nut that you had earlier removed.
- Place the tow bar tongue inside the tow bar base.
 Align the holes and secure with snorter clevis pinario one spring pin.
- Use the ionger cievis pin and the spring pin to attach the chipper shredder to your lawn tractor. See Figure 5.


REMOVING TOW BAR

- Remove the clevis bin and the spring pin attaching the tow bar tongue to the tractor.
- Remove the ionger clevis pin and the spring pin attaching the tow par tongue to the tow par pase and pull the tongue out of the pase. You may keep the tow bar base attached to the chipper shreader.
- If you had drained the engine of oil and gasoling for transporting the unit, refill with tresh oil and gas before operating the unit.




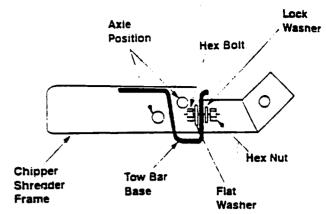



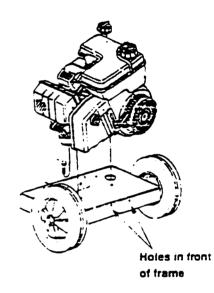



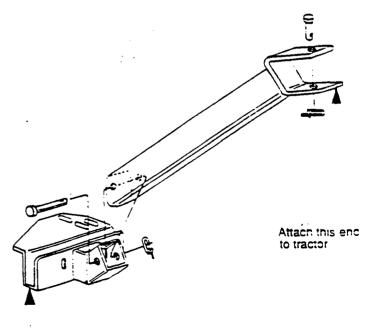

almers.com